


Design and make your own buttons with the button press.
Our buttons are 1 inch in diameter.



 [Learn More](#)


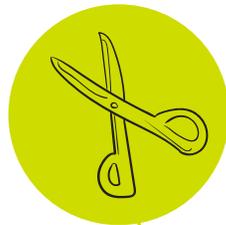


START HERE

Use the blank templates provided to draw your own or use the software at www.button-designer.com to design and print your button. Cut out your design using the paper punch.

MAKE THE TOP

In the shallow end (A) insert a blank metal piece, your design and a clear plastic film. Turn the base and pull the lever towards you.

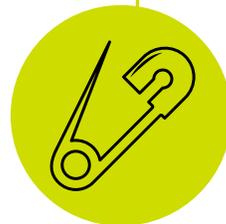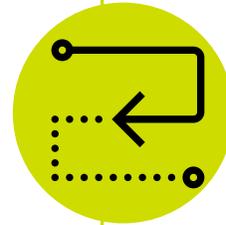

ASSEMBLE

Fill the deep end (B) with the metal pin piece. Turn the base and pull the handle toward you. Remove your finished button.



Design and make your own buttons with the "Chi Buttons" press.
Our buttons are 1 inch in diameter.

- 1 Use the blank templates provided to draw your own or use the free software at www.button-designer.com to design and print your own buttons.
- 2 Use the paper punch to cut out your design.
- 3 Fill the shallow end side (labelled A) with a blank metal piece with the lip down.
- 4 Place your design on top and a plastic film on top of your design. Ensure the top of your design is at the top of the button.
- 5 Rotate the base and pull the handle towards you.
- 6 Fill the deep end (labelled B) with the pin piece facing upside down. The curved pin part should be facing out and the straight side facing down. The pin should be at the top of the button.
- 7 Turn the base and pull the handle towards you again. Remember not to force the machine. If you need to use a lot of pressure, check that your pieces are in correctly.
- 8 Turn the base and remove your completed pin.



Want to learn more?
Watch a video tutorial



 Learn More